




In Ear Canal Bluetooth Ear Buds

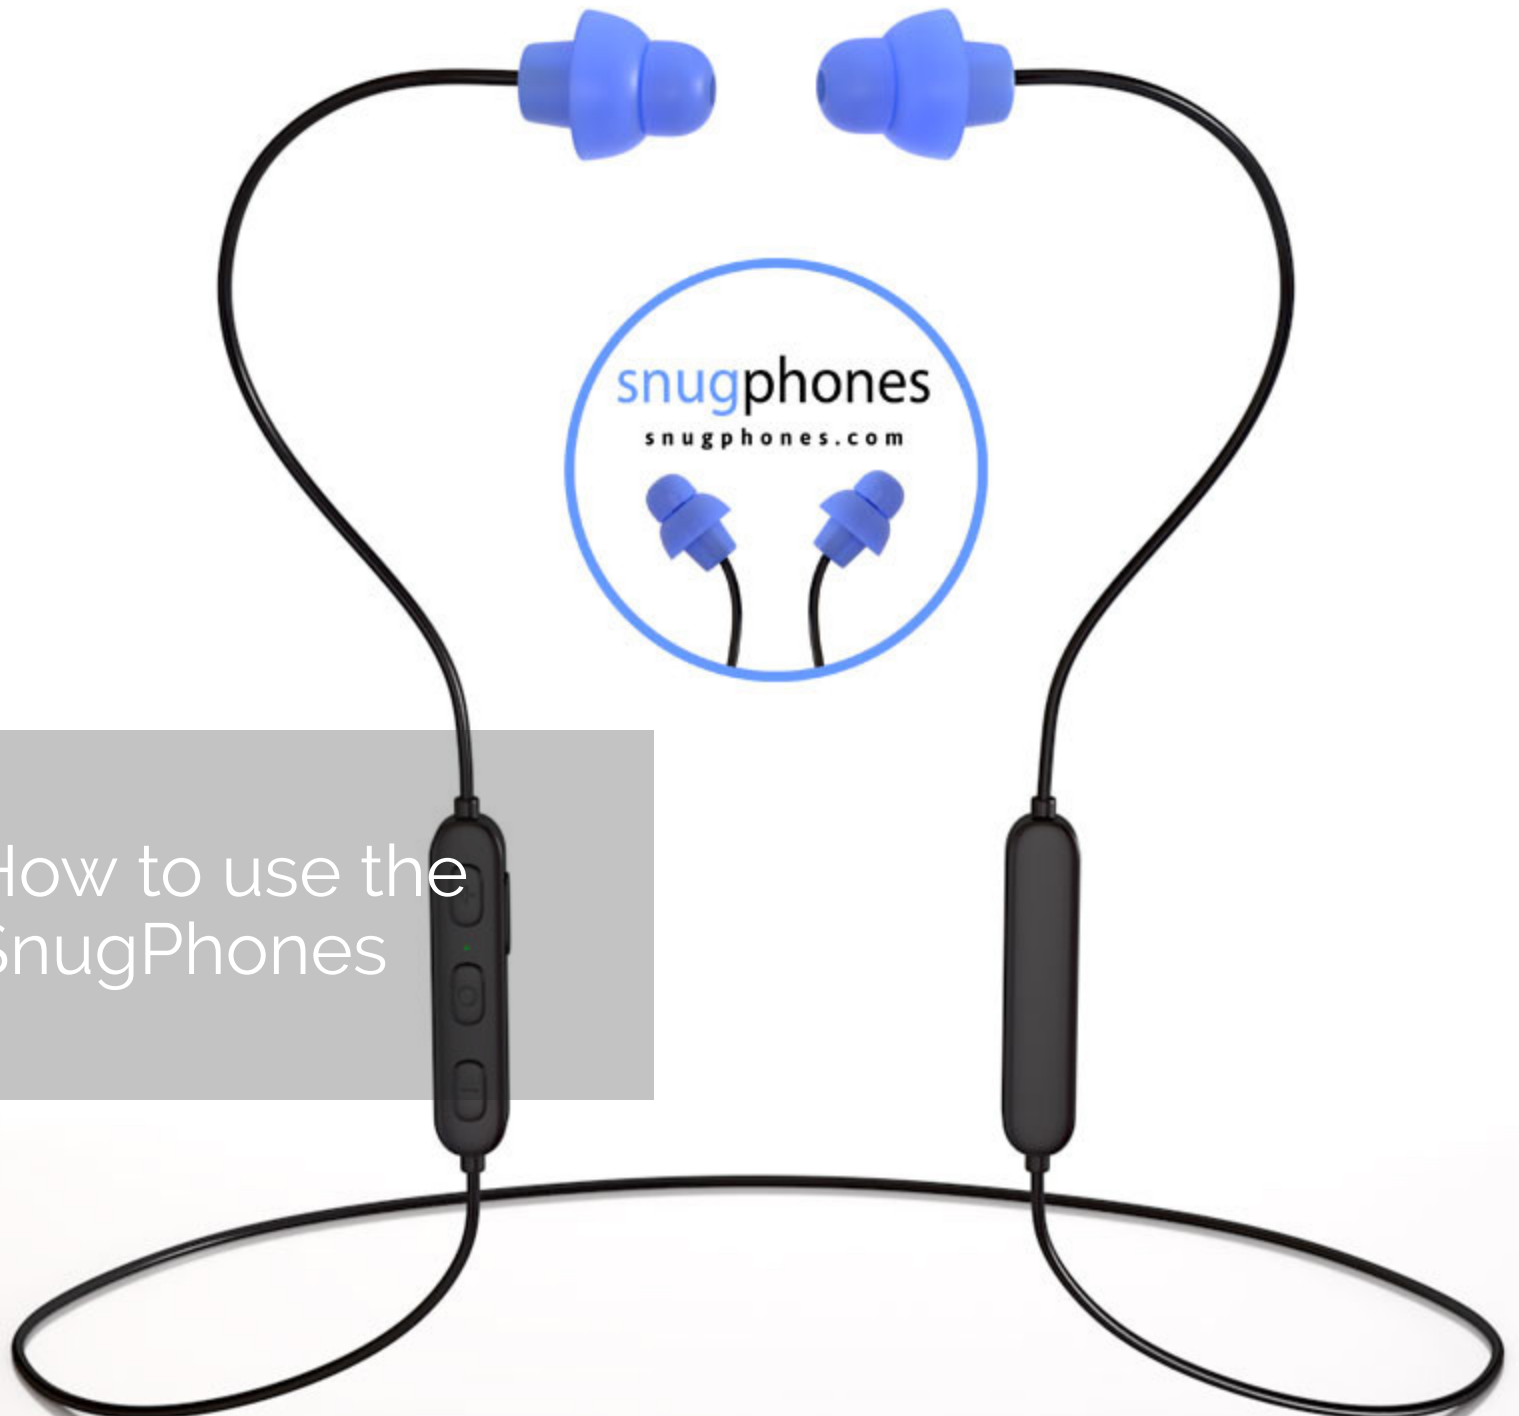

How to use the
SnugPhones

How to use – SnugPhones

Pairing your Snug-phones to your mobile phone is very easy. Hold the middle button on the controller and you will hear "power" on. Then on your phone make sure your bluetooth is turned ON. When you see the Snug-phones appear on mobile device just click on it and it will pair to your mobile device. Once Snug-phones pairs to your mobile device you will hear 'connected" Thats it and it should connect very fast after initially paired. Any issues please check with your mobile device model on paring

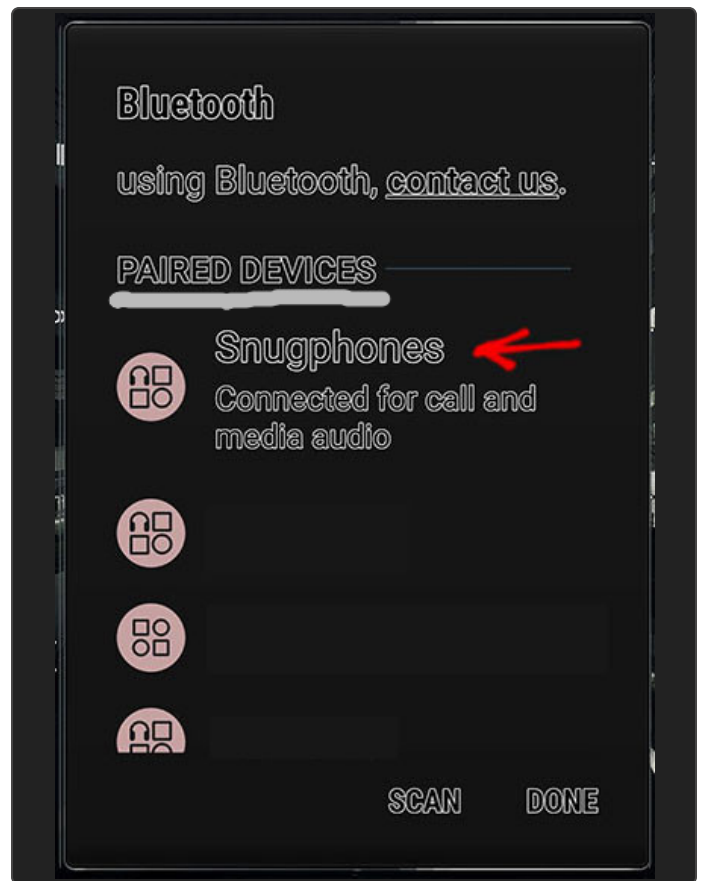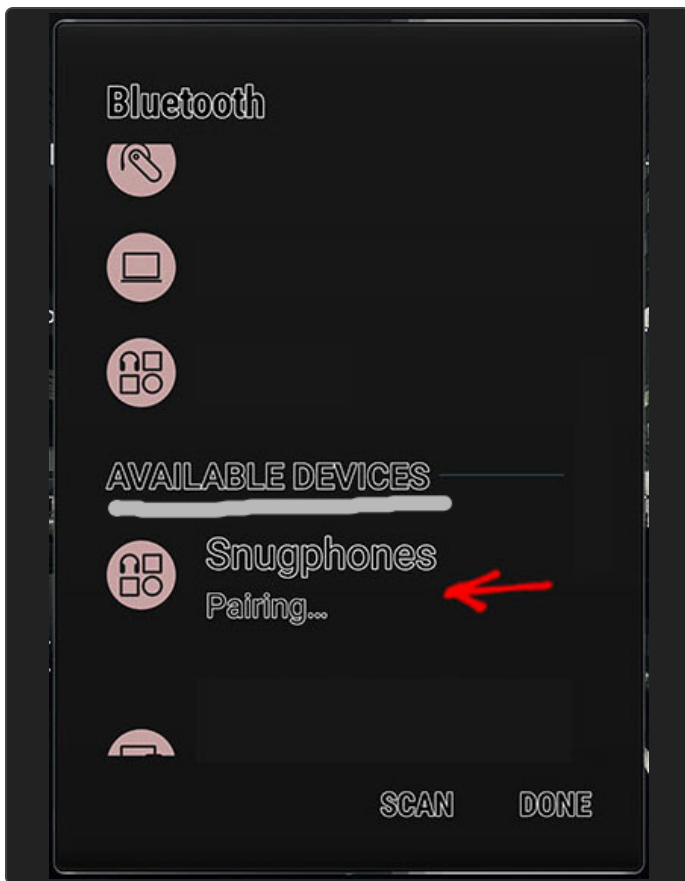

How to use – SnugPhones

To Charge The Battery

Battery must be fully charged before the first use.

- A. Connect the charger cable to the charging socket on headset*
 - B. Plug the charger to the wall outlet*
 - C. Red light means charging. When charged will turn to blue.*
 - D. Disconnect charger from headset*
- Ready to use!*

To Turn Snug Phones ON & OFF

- A. To power on, hold middle button for 3 seconds until flashes blue*
- B. To power off, press and hold for about 6 seconds. (you will hear it disconnect from bluetooth then, it will tell you it is powering off.)*

To Pair with a bluetooth device

- A. Turn on Snug Phones*
- B. Turn Bluetooth ON your phone or device*
- C. Snug Phones will show up as "Snug Phones" on your bluetooth device. Press to pair.*
- D. If it prompts for a code enter: "0000"*
- E. If pairing is not successful, repeat cycle.*

To Answer a Call

- A. Press the answer key on your phone.*
- or*
- B. Press the answer/end button on Snug Phones*

To End a Call

- A. Press the key on your phone*
- or*
- B. Press the answer/end button on Snug Phones*

To Reject a Call

- A. Press the end key on your phone*
- or*
- B. Press and HOLD the answer/end key for about 1 second when phone is ringing.*

To Make a Call

- A. Dial the number from your phone then "call button" on your phone.*
If headset is hooked up to bluetooth it will automatically transfer the call to your head set and phone.

How to use – SnugPhones

To Redial the Last Called Number

A. Single press the answer/end key twice (2 short presses)

To Active Voice Dialing

A. Your phone must support this function. When Snug Phones are in standby mode press and hold the answer/end key for 3 seconds.

B. Speak or say the number you want to dial

To adjust Volume of headset

A. Press volume UP/DOWN buttons on your phone

or

B. Press volume UP/DOWN buttons on your Snug Phones

Storing your Snug Phones for longer life

A. Power off the headset

B. Do not expose it to extreme temperatures

C. Do not submerge into water

IMPORTANT INSTRUCTIONS FOR PROPER PLACEMENT

The "T" indicates "Top" make sure when you put the Snugphone inside of the ear the T is faced UP.

When you insert your Snugphones push the bud UP the ear canal and all the way INSDIE. You should ONLY see the cord and not the ear plug once they are properly inside the ear!

Adjust the cord length with the round clip included

You can use the alligator clip included to secure the cord onto your t-shirt or tank top for less movement.



If your snugphone tips get earwax in them, simply use a toothpick to clean.

How to use Snugphones



How to use – SnugPhones